




AMS60307L
w/Optional Casters and Shelf



AMS60307Q
w/Optional Casters

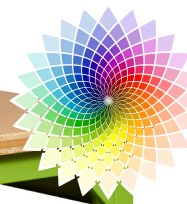

AMS60307T
w/Optional Casters



PRODUCT

Fab-Lab Workbench

FEATURES

- Choose from more top options: high pressure laminate (HPL), ChemGuard, maple butcher block, ShopTop, phenolic or epoxy resin
- Colored 3mm PVC edge banding options available on HPL and ChemGuard top options.
- Legs are constructed of 2" x 2" square steel outer tubes welded together with upper and lower cross braces. 1-3/4" x 1-3/4" square steel 14-gauge inner tubes with riv-nuts spaced 1" on-center provide adjustability from 25-1/2"H-35-1/2"H
- Apron constructed of 16-gauge with end gusset geometry for additional support. Attached to the legs with bolts in the field.
- Additional 16-gauge stretcher bar provides additional rigidity to the table frame. Can be installed front, middle or back of leg frame.
- Frame powder coated in eight standard colors: black, dark gray, silver, light gray, white, carrot, lime, and aqua with a matte finish for a modern look.
- The top is attached with screws in two directions ensuring stability.
- Equipped with adjustable glides for precise leveling
- Optional 3" casters available. Add 3-1/2" height. (#253996-x)
- Optional color coordinated 12" deep shelf made from 14-gauge steel.

AMS SERIES TABLE CONFIGURATOR

STYLE	WIDTH	DEPTH	TOP TYPE	HPL COLOR (L)	3MM EDGE-BANDING (2/L)	STEEL COLOR	SHELF COLOR	60" SHELF	72" SHELF	96" SHELF
AMS	60	30	Black T-Mold (1)	Black (B)	Black (B)	Black (B)	Black	255588-B	255589-B	255590-B
			ChemGuard (2)	Charcoal (C)	Almond (A)	Dark Gray (D)	White	255588-W	255589-W	255590-W
	72	36	Phenolic (4)	White (W)	Charcoal (C)	Light Gray (G)	Carrot	255588-T	255589-T	255590-T
			Maple BB (5)	Almond (A)	White (W)	Silver (S)	Lime	255588-L	255589-L	255590-L
			Epoxy (6)	Natural Maple (N)	Natural Maple (N)	Carrot (T)	Aqua	255588-Q	255589-Q	255590-Q
			ShopTop (7)	Erasable (E)	Carrot (T)	Lime (L)	Silver	255588-S	255589-S	255590-S
			P Lam Color (L)	Lime (L)	Aqua (Q)	Light Gray	255588-G	255589-G	255590-G	
				Aqua (Q)	White (W)	Dark Gray	255588-D	255589-D	255590-D	
				Royal (Y)		Optional Casters (Set of 4)		253996		
				Red (R)						
Peacock (P)										